

## Elecon Measurements

A group of EIMeasure India Private Limited

### HO & Unit-I

764, 4th Phase, 707, Yelahanka New Town, Bangalore - 560 064. INDIA  
T : +91 80 2846 1777/744 F : +91 80 41272461  
CS : +91 80 3290 4489 E : contactblr@elmeasure.com

### Unit-II:

Goutham Garden, No. 4, Veerapandi, Coimbatore - 641019 INDIA  
T : 0422 2697200. TF : 0422 2695200 E : contactcbe@elmeasure.com

### Unit-III

Plot No.: 323/19, Camp Road, Selaqi, Dehradun, UTTARANCHAL  
C : 097600 02492, 12492 E : contactddn@elmeasure.com

### Unit-IV

1049, MIG 3rd Phase, Yelahanka New Town, Bangalore - 560 064. INDIA

### Sales Offices:

BANGALORE | CHENNAI | COIMBATORE | MUMBAI | DELHI | HYDERABAD | USA | UAE

PG/LG1R/V5/0115

## 1. FEATURES


- Universal Auxiliary supply (80V to 300V AC/DC)
- True RMS measurement.
- Active Energy, positive energy accumulation
- User configurable (Editable) password
- 'OLD' register to store the previously cleared energy value.
- Simultaneous sampling of Volts & Amps.
- Universal Voltage Input Line to Line (50 to 550V AC) and Current secondary Input (0.05A to 6A).

## 2. UNIQUE FEATURES


- 1 row 6 digit display for readability.
- Parameters (VLL, VLn, A, F, W, VA, Wh, PF, Load hour) along with respective R, Y and B Phases.
- Auto-scaling of kilo, mega, & decimal point.
- Energy selection : Wh/VAh
- One/Two User defined Programmable parameter
- Optional Programmable relay output maximum 1 and tripping time up to 180 seconds.
- Energy display programmable-counter based or resolution based.
- Energy resetting at 999999KVAh x Multiplication factor.

## 3. WIRING DIAGRAM - ( LG+ )


Single phase connection




Delta connection (2E)  
3Phase 3 wire system

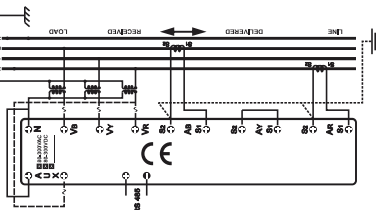

Star connection (3E)  
3Phase 4wire system

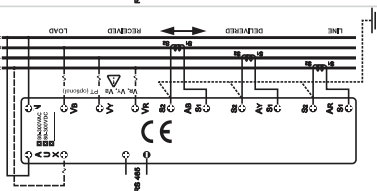

## WIRING DIAGRAM (LG/ μG+)

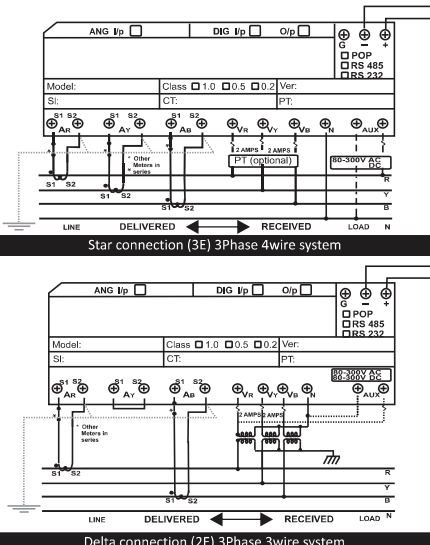

Note:- \*Wiring should be in accordance with the National Electrical Code &/or the Canadian Electrical Code, Part I.\*  
- Lugs to be used for connecting wires.  
- Connections to be made using 12 to 14 SWG (2.0 mm<sup>2</sup> to 2.6 mm<sup>2</sup>) Industrial grade wires.  
- For DC Auxiliary Voltage, +/-ve can be connected anyway.



## PROGRAMMING GUIDE

### LG & LG+ Single Row /μG+ Series

www.elmeasure.com

## 4. KEY FUNCTIONS

Key	In SET (Programming) mode	In RUN (Measurement) mode
Right/UP ↗	To select the value and accept the value (it act as a Right key in programming mode)	To scroll pages in upward direction to look at different parameters.
DOWN ↘	To edit the value/system types downward in edit mode and scroll through the parameters.	To scroll pages in downward direction to look at different parameters

## 5. LED INDICATION

LED Status	Meaning	LED Status	Meaning
M	Mega	⏏	Pulse
-	Minus	REV	Reverse
K	Kilo	OLD	Old Reading (Cleared readings)
📡	Communication	DO	Digital Output

## 6. ENTERING CONFIGURATION (SETUP) MODE

To configure the setup parameters through front panel, the following steps can be followed.

Step	Actions	Display Reads	Range/Options/Comments
1	Press RIGHT & DOWN keys together to enter SETUP	0000 first digit "0" blinking	
2	Press DOWN key to decrement the first digit to "9" sequentially come to digit 1.	1000 first digit "1" blinking.	If any other password is already set press RIGHT and DOWN key to reach the right password
3	Press RIGHT key four times to accept the password.	CLr1 display CLr	Defines the clearing option for the meter
CLEAR Mode : Press RIGHT key for CLEAR Mode			
4	Press RIGHT key	CLr1 n Options can be changed by pressing DOWN key. Display will prompt to 'y' or 'n' while pressing DOWN key.	Option : (YES) / (NO) Y (for clearing ) N (for not clearing)
5	Press RIGHT key To accept the edited option.	0000LL Displays xxxx LL (Clear Mode ends here)	
SETUP Mode : Press DOWN key for SETUP Mode			
6	Press DOWN key	StAr.EL display StAr.EL	Defines the power system configuration. Options: STAR /DELTA/1. Phase
7	Press RIGHT key	StAr.EL StAr/ dELt/ 1.Phase, selected mode blinks. Options can be changed by pressing DOWN key.	Press RIGHT key to accept the mode.
8	Press DOWN key	415.0PP XXXX P.P (PT Primary) (415.00 -default/factory set)	Programmable Range: 100V to 999kV
9	Press RIGHT key	415.0PP First digit blinking can be edited using DOWN key.	
10	Press RIGHT key to accept the edited value for first digit.	415.0PP Second digit blinking, can be edited using DOWN key. Press RIGHT key to accept the edited value. Continue the same method till fourth digit.	
11	Press Right key to accept the value.	415.0PP Decimal point blinking. Can be set at appropriate location using DOWN key. Ascertain the correct scale (Mega/Kilo) is selected. Mega/Kilo is placed on the right hand side of the display by Letter M/K. Press RIGHT key to accept the edited value.	Eg: To set 11.00kV Set first four digits (1100) as explained above keep pressing DOWN key to place decimal point at appropriate location. USE RIGHT/DOWN key..

12	Press DOWN key	415.0P5 XXXX P5 (PT Secondary) (415.00 -default/factory set)	Programmable Range:50V to 550V Follow the same procedure as explained in step-9 to 11.
13	Press DOWN key	5.000C.P XXXX C.P (CT Secondary) (5.00 -default/factory set)	Programmable Range: 0.5A to 99kA Follow the same procedure as explained in step-9 to 11.
14	Press DOWN key	5.000C.S XXXX C.S (CT Secondary) (5.00 -default/factory set)	Programmable Range: 0.5A to 6A Follow the same procedure as explained in step-9 to 11.
15	Press DOWN key	no rE no rE (Reverse lock)	Reverse lock (blocks energy accumulation in case the CT polarity is reverse). Option : NO/YES
16	Press DOWN key	UEC.H UA UEC.H UA (Method of VA Selection).	Arithmetic (Arth), Vector harmonics (UEC.H). Vector (UECt). Can be selected using RIGHT & DOWN key.

Once the required parameter is programmed press the DOWN key continuously till it reaches SAVE page.  
Note:Sl.No. 3 to 5, 15 to 18 and 27 to 29 are not applicable for µG+/LG/LG+1100 models.  
Sl.No. 17 to 18 is applicable for µG+/LG/LG+1119 and µG+/LG/LG+1129 models only.  
Sl.No. 19 to 20 and 28 are Not Applicable for µG+/LG/LG+1119 and µG+/LG/LG+1129 models.  
Sl.No. 28 is not applicable to LG/LG+3121 model.

### 7. The List of parameters can be configured and the range is given below

Sl. No.	Parameter	Default Setup	Range / Options
1	Connection mode(EL)	STAR	STAR/ DELTA/ 1.Phase
2	PT Primary (P.P)	415.0	100V- 999kV
3	PT Secondary (P.S)	415.0	50V - 550V
4	CT Primary (C.P)	5.000	0.5A - 99kA
5	CT Secondary (C.S)	5.000	0.5A - 6A
6	Reverse lock(rE)	no	Yes/no
7	VA selection (UA)	UEC.H	Arth (Arithmetic)/UECt(Vector) /UEC.H(vector harmonics)

17	Press DOWN key	bASCP1 bASCP1 (Parameter1 Selection). Default: bASC. (For 1129) Default: Wh. (For 1119).	P1: bASC/Wh/ VA/ WAts (For 1129) P1: Wh/PF/ WAts /VA (For 1119) Can be selected using RIGHT & DOWN keys.
18	Press DOWN key	PF P2 PF, P2 (Parameter 2 selection). Default : PF (only for 1129)	P2: PF/WAts/Wh /VA. Can be selected using RIGHT & DOWN keys
19	Press DOWN key	dSbL.d1 1st digital output parameter can be selected using RIGHT & DOWN key. Options: Under (Freq/Amps /Volts/PF), Over (Freq/ Amps/Volts/Watts/Wh), Single Phasing.	1st digital output parameter can be selected using RIGHT & DOWN key. Options: Under (Freq/Amps /Volts/PF), Over (Freq/ Amps/Volts/Watts/Wh), Single Phasing.
20	Press DOWN key	1000.d1 1000.d1(Default 1000)	Digital Output Parameter Threshold Value. Range :0.001 to 999.9M Can be set using RIGHT & DOWN keys as in step 9 to 11.
21	Press DOWN key	3.000d.d 3.000d.d (digital output trip delay time, default / factory set :3.000)	Range: 1 to180 sec. Can be set using RIGHT & DOWN keys as in step 9 to 11.

8	Parameter1 selection (P1)	bASC (for 1129) Wh (for 1119)	Parameter1 selection: bASC/Wh /VA/WAts (for 1129) Parameter1 selection: Wh,VA, WAts (for 1119)
9	Parameter 2 selection (P2)	PF	Parameter2 selection: PF/WAts/ Wh/VA. (For 1129 only)
10	1st Digital Output parameter (d1)	dSbL	Over (VLL,A,Freq), Under(VLL,A, Freq), Under PF, Over WAtts, Over Wh
11	1st Digital Output threshold Value (d1)	1000.	0.001 to 999.9M
12	Digital output trip delay (d.d)	3.000	1.000 to 180.0 SEC
13	Baud rate (bA)	9600	1200 to 19.2k
14	Parity (Pr)	Even	Even/ Odd/ no
15	Device Id (dU)	1.000	1.000 to 247.0
16	Password (PW)	1.000	1000 to 9999
17	Energy (En)	rESL	rESL /COUП
18	Pop On time (PO)	250.0	50 to 500 milliseconds
19	Energy Selection (E S.)	Wh	Wh/VAh

22	Press DOWN key	9600bA XXXX.bA (baud rate) Communication speed. (9600 default /factory set)	Defines the baud rate. Option: 2400, 4800, 9600, 19.20k. Options can be changed using RIGHT & DOWN keys.
23	Press DOWN key	EUEn.Pr EUEn.Pr (Parity check)	Internal communication error check EUEn (even)/odd(odd)/no (no parity). Options can be changed using RIGHT & DOWN keys.
24	Press DOWN key	1.000dU 1.000 dU (device ID)	Defines the (ID) communications identification number. Range : 1 to 247 Can be set using RIGHT & DOWN keys as in step 9 to 11.
25	Press DOWN key	----PW ----PW (Password user definable).	Range: 1000-9999. CAUTION: memorize the Password. Use the same Password for next time. Instruments will reject other Passwords.


### 8. Enabling and disabling of Auto scrolling

Enabling auto scrolling: Press UP key continuously for 5 seconds or until display shows EnbLAu for upward scrolling. Press Down key continuously for 5 seconds or until display shows EnbLAu. for downward scrolling.

Disabling auto scrolling: Press any key (UP/DOWN), display show dSbLAu and returns to normal mode.

### 9. Connection Diagram

Connection diagram for Digital Output, RS485 and from AMF Panel for EB/DG changeover

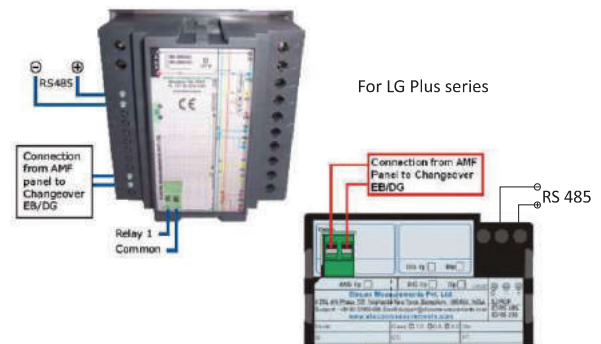

For LG series.

26	Press RIGHT key to view the password	1000	CAUTION: Password can be reset only at the factory. Can be set using RIGHT & DOWN keys as in step 9 to 11.
27	Press DOWN key	rESLEn Energy value format i.e., the energy accumulated in the meter to be displayed in Resolution (default) or Counter format.	Options can be changed using RIGHT & DOWN keys. CAUTION: In counter mode energy accumulation is visible depending on load.
28	Press DOWN key	250.0PO 250.0 PO (Pulse output On time)	Range: 50 to 500ms. Can be set using RIGHT & DOWN keys as in step 9 to 11.
29	Press DOWN key	Wh. ES	Energy Selection. Option : Wh/VAh
30	Press DOWN key	SAVE 9	If "n"(no) is selected then Meter enters into RUN mode without affecting any edited Values in the setup
31	Press RIGHT key to store the changes done	SAVE 9 Displays XXXX LL (Setup Mode ends here and returns to Run mode).	

### 10. Mechanical Specification:

Dimension Bezel:  
96 x 96 mm (Depth 50mm behind Bezel)

Panel Cutout:  
90<sup>+2</sup><sub>0</sub> x 90<sup>+2</sup><sub>0</sub> mm

